


MRPLATE31 Installation Instructions

The MRPLATE31 can be mounted to the monitor in a low, medium, or high position depending on your preference.



When mounting the plate to the monitor please use the provided M4 screws and attach the plate to the monitor's 100mm VESA mounting points at the countersunk M4 screw hole positions on the plate (highlighted in green in the diagram below). The countersunk holes you will use will depend on whether you want to mount the plate in the low, medium, or high position.

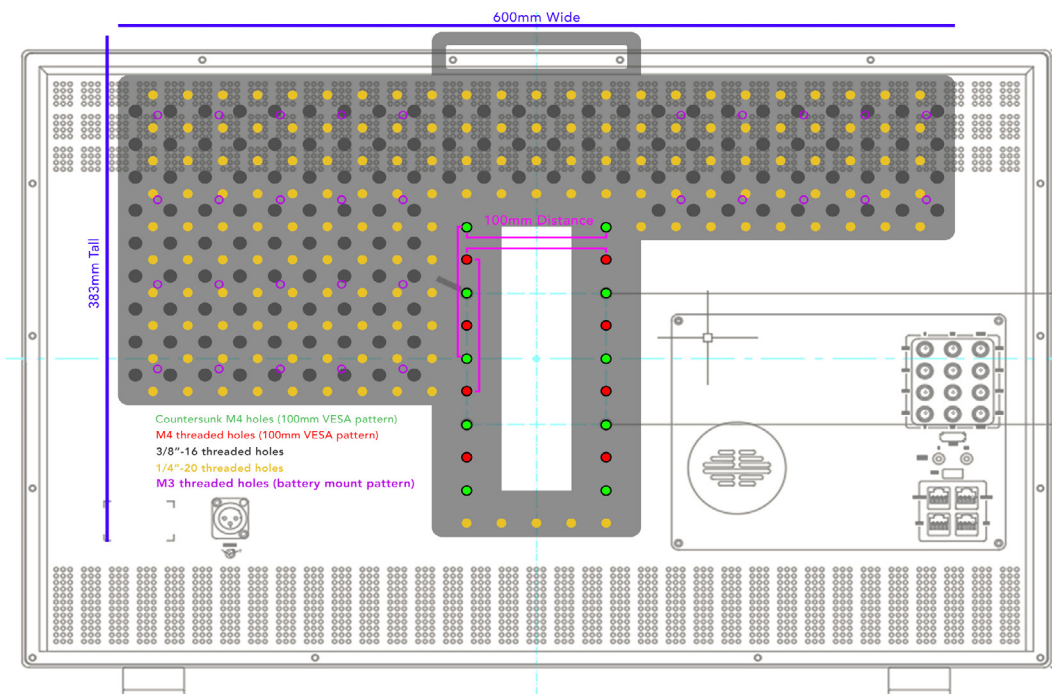

If attaching a 100mm mount or desktop stand to the MRPLATE31 please do so using the M4 threaded holes provided on the plate (highlighted in red in the diagram above). Mounts and desktop stands can be attached in both a medium or low position on the plate depending your preference.



If you have any questions about use or installation please contact support@flandersscientific.com.